

Network as STA (only functional with the Wifi option on the unit)

Network AP SSID:

Name of the network (SSID) Enter the name of the WiFi network you want to connect to.

Network IP address	192.168.0.17
--------------------	--------------

AP-Password:

Enter the password for the selected network.

AP password	rTD20324Nbp0
-------------	--------------

Network IP address:

Enter the IP address of the Xtrem unit in the selected network. It must be within the range of this network. This data can be assigned automatically with the DHCP option.

Network IP address	192.168.0.17
--------------------	--------------

Network DHCP:

Automatically assigns an IP address to the Xtrem device if the "ON" option is selected. If "OFF" is selected, the IP must be entered manually.

<input checked="" type="checkbox"/>	ON
-------------------------------------	----

Example in the PC Xtrem software:

The screenshot shows the PC Xtrem software interface. At the top, the window title is 'GRAM_02'. The main display shows a weight of '0.000 kg'. Below the display are several control buttons: 'GRAM', a gear icon, '→0←', 'HR', 'Hold', '+', '→PT', '→T←', and 'B/N'. The 'Network as STA' option is highlighted in yellow. The network settings are as follows:

Network AP SSID	GRAM I&D
AP password	rTD20324Nbp0
Network IP address	192.168.0.122
Network DHCP	<input type="checkbox"/> OFF

Below these settings is a button labeled 'reset network using current settings'. At the bottom, there are fields for 'TCP server port (XTREM)' (6666), 'UDP remote port (PC side)' (5556), and 'UDP local port (XTREM side)' (4445). The status bar at the bottom shows 'XTREM 473548 TC12036' and 'Max 30kg Min 0,02kg e=0,001kg TareMax=-30kg'.